



Main Buckle Operation

How to **LOCK** (attach) the Main Buckle, and Adjust the length - **NO** key required



1. Connect the Main Buckle to the stainless steel Tongue. This action is similar to seat belt mechanisms in cars – No Key Required.
2. Tighten belt around Subject's waist by pulling the 2-inch strap away from the Main Buckle and **in-line (parallel)** with the return strap until it is snug on the Subject.
3. Place any excess strap through the attached elastic band.

How to **UN-LOCK** (detach) the Main Buckle

1. Insert handcuff key into the key-hole located on the Main Buckle - rotate key as indicated on the Main Buckle (clockwise). Key will remain in the key-hole when in the un-locked position.
2. Depress the red "PRESS" button on the Main Buckle - The Tongue will eject from the Main Buckle thereby releasing the Waist Belt from the Subject.

How to **Adjust** the length of the tether

1. Insert handcuff key into the key-hole located on the Main Buckle - rotate key as indicated on the Main Buckle (clockwise). Key will remain in the key-hole when in the un-locked position.
2. **Depress and Hold** the red “PRESS” button and pull the strap to the desired length.
3. Release button and remove key from the Main Buckle.

LTL Vantage, Inc.