



Care and Maintenance

Like all restraints, the SureLock Restraint System should be inspected and cleaned after each use to ensure it is in proper working order and that there are no risks of infection due to blood or other bodily fluids.

Nylon Parts (waist belt, hand tethers, leg restraint)

The Nylon parts of SureLock may be cleaned with a mild 10% alcohol solution, and/or warm water with a common dishwashing detergent. A mild scrubbing action may be used for stubborn stains.

Do not saturate or submerge the SureLock Restraint - Do not use bleach - Do not dry clean - Wear hand and eye protection when cleaning.

If the straps fray over time, the fuzz can be removed with the open flame of a lighter. Only a slight flame is needed and caution must be used.

UniLock devices

The UniLock device is designed to increase Officer Safety by allowing the Officer to control the maximum distance a Subject's hands can be from the Waist Belt. UniLock is spring loaded so that the key will snap back to the locked position if not being actively turned. This feature is beneficial if the Subject pulls away during processing.

The key cannot be removed with the UniLock in the "unlock" position.



Gum Metal Color
(Standard)



High Visibility Yellow (HVY)
(Optional)

The UniLock devices and the Main Buckle may occasionally require a small amount of lubrication (WD-40 or equivalent), especially after cleaning.

If required, the UniLock devices on the Waist Belt can be removed by unscrewing the 4 screws on the back (body side) of the belt.



Blood and Bodily Fluids Decontamination

The following disinfecting agents may be used on the surfaces of the SureLock Restraints. All these products may be found via an Internet search engine. Hand and eye protection is highly recommended.

1. Medaphene Spray
2. Redicide Spray
3. Staphene Spray

Follow the instructions on the product.



Ensure the SureLock Restraint is fully dry before storage. If the handcuffs, UniLocks or Main Buckle have been exposed to water, it is suggested to use a hair dryer to remove the moisture.

Standard Handcuff Maintenance


The SureLock Restraint System comes standard with Peerless 700-C carbon steel, nickel-plated handcuffs. We defer maintenance issues with handcuffs to the specific manufacturer's manual.

- Handcuffs should be inspected for signs of rust and sharp edges.
- Check to see that the single bar can smoothly move around the rivet, freely rotate and re-engage the pawl.
- Check both cuffs to ensure that the pawl is free of any obstruction.
- Check for signs of wear at the swivels.
- Check the double lock and release feature on both cuffs.

Avoid dropping or banging against hard surfaces. Keep the ratchet and keyhole free of dirt, lint or other foreign substances that may hinder proper functioning.

When unlocking, be careful not to torque the key guide post. This will loosen the post causing it to fall out. Be careful not to over rotate the key causing the key flag to break off or become stuck in the locking mechanism. Use extra caution when using oversize keys.

If exposed to moisture, dry thoroughly. Most importantly, dry the inside locking mechanisms. Use a hair dryer if necessary to force moisture out of the lock cavity. Avoid temperatures above 149°C (300°F.) After drying, re-lubricate by applying a single drop of

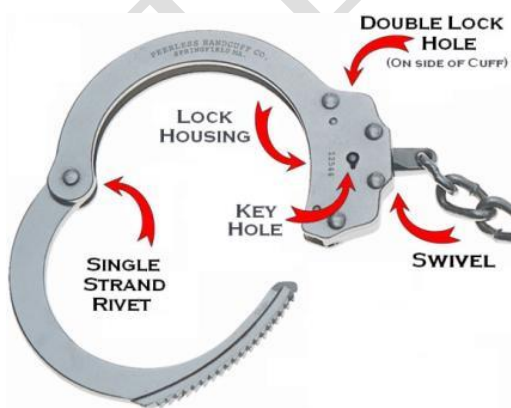

light machine oil at the points indicated. Heavy oil or grease will clog the working parts.

Work the single strand through and lock & unlock the cuffs a few times to distribute the oil. Then remove any excess oil with a lint free cloth.

Storage

Proper storage after use is important to ensure that The SureLock Restraint is ready to use quickly, when needed.

HAND RESTRAINT WAIST BELT:

Proper storage after use is important to ensure SureLock is ready to use quickly, when needed.

Handcuffs and Strapping

1. Fully extend the Hand Restraint tethers to their maximum length.
2. Ensure the handcuffs are set in the single-lock position.
3. Open the front pocket and lay the two straps and handcuffs along the length of the belt - fully extending the Hand Restraint tethers into the pocket, one over the other.
4. Close the pocket ensuring the Velcro connection

Note: The Medical Cuffs will remain outside the storage pocket.



Main Buckle

1. Unlock the Main Buckle allowing it to slide to the end of the strap - fully extended for the largest waist size - Leave the end of the strap clear to grasp later when placed on a Subject.
2. Turn the Waist Belt over and lay the Main Buckle Strap along-side the back.
3. Secure the strapping under the two elastic bands
4. Fold the ends of the Waist Belt towards the underside, and then fold the Waist Belt in half.
5. Place in the Storage Bag



LEG RESTRAINT

Depending on the model of leg restraint follow the appropriate instructions below:

Standard Leg Restraint (LR1)

1. Ensure the handcuff (attaches to the waist belt) is set to single lock
2. Unlock and slide the upper UniLock device so it is close to the Red hand pull.
3. Unlock and slide the lower UniLock device so it is next to the upper UniLock.



4. Fold the Leg Restraint upon itself and secure in the elastic holder.
5. Place in the Storage Bag

